

## DataNode<sup>TM</sup> (switch type) Numbering

Switch type (part # SD-DN-SW) **DataNodes** are designed to connect field sensors with <u>normally open</u>, voltage free contacts to SDS series controllers via the two-wire path.

DataNodes report their status back to the controller every three seconds

 


## **How to Program**

Connect red wires of DataNode to controller programming port using the leads supplied with the controller.



**Program Port** 



**Note:** Each DataNode<sup>™</sup> connected to the 2-wire path must have a unique address (number). Numbers must be from <u>01 to 12 only.</u>



**Caution:** Ensure programming is correct before disconnecting from the program port. Once disconnected the device cannot be reprogrammed.

Once programmed, refer to operation manual for; assignment, configuration and set-up procedures.

Signal Data Systems A division of Technical Irrigation Imports 16 Mumford Place, Balcatta WA 6021 Tel: 08 9240 2322 Fax: 08 9240 2210

Email: <a href="mailto:sales@signal.com.au">sales@signal.com.au</a>
Web: <a href="mailto:www.sdsystems.com.au">www.sdsystems.com.au</a>