


FrostWatch Sensor, Power & DataNode wiring

1. Remove front cover.




2. Remove upper circuit board by pinching the securing clips (arrowed).

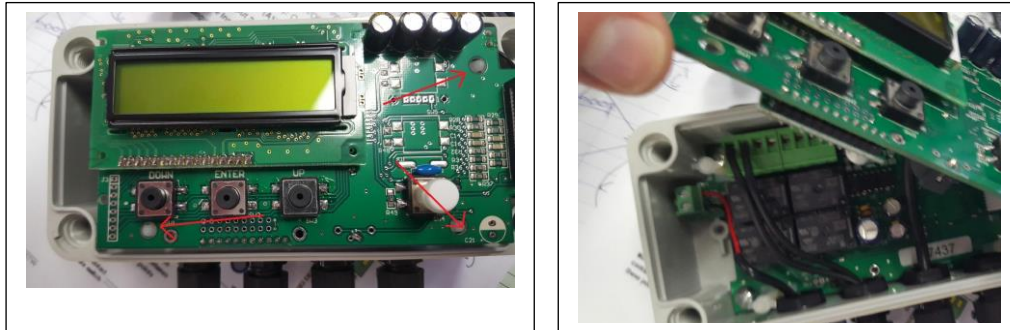

3. Attach power supply cable (ensure correct polarity).



4. Attach pre-programmed DataNode (black wires).

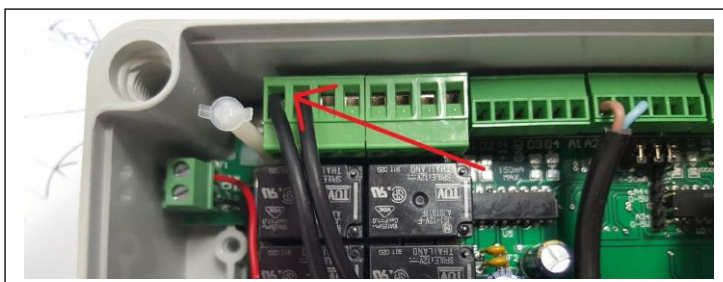

5. Replace PCB and front cover - power on and refer to manuals for programming instructions.